

(Compliant with norm NF P 93-352 ie PIR)




Route de la Limouzinière BP41
44310 St PHILBERT DE GRAND LIEU
Phone: +33 (0)2 40 78 97 22
Fax: +33 (0)2 40 78 78 71
www.duarib.fr

WORKING LOAD: 150 Kg
FLOOR SIZE: 0.40m x 0.50m
FLOOR HEIGHT - 4 settings:
T7P adjustable legs (18176)

1,72m	2,07m	2,45m
1,49m	1,89m	2,52m
1,26m	1,72m	2,44m
1,03m	1,53m	2,13m

Length: 1,74m
Height: 0,52m
Weight: 30,6 Kg

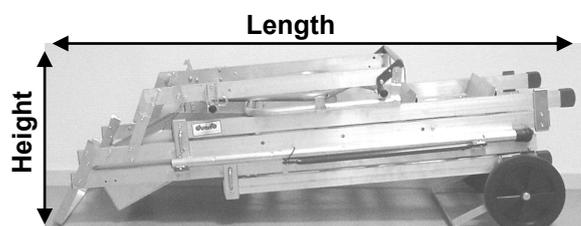

1. Product description and marking code:


These Plates-formes Individuelles Roulantes (Individual Rolling Platform, IRP) are used to work safely in heights.

Two wheels are designed to move the I.R.P. and they cannot be moved.

Two independent stabilizers are telescopic, the locking is automatic and the product's stability is guaranteed in fair use conditions as recommended by the norm.

2. Use: - Opening:

Déplier la partie garde-corps puis vérifier la mise en place des verrous.

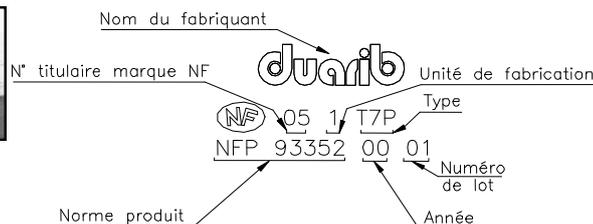

Open the device by pulling on the wheel side, legs touching the ground.



Check the floor lock is set.



Pull the stabilizer to the ground.



Open the safety rails and place the upper bar so it touches them.


Moving while in working setup:

- Hold the empty platform by the legs on the access side. The wheels touch the ground and the stabilizers are retracted or not, depending on the environment.





Transport:

- Once the platform is folded, lift it by the safety handrail.

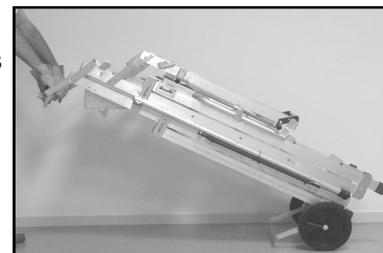

Setting the height:

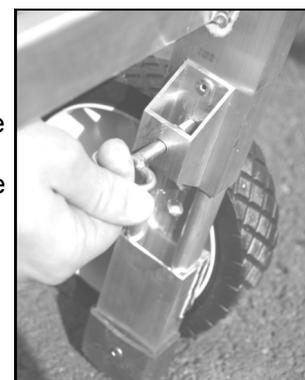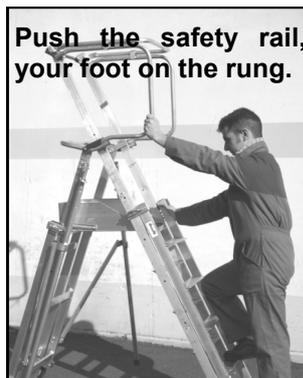

Setting devices with 4 independent and adjustable legs:


- Pull the lock rod and set the desired position (adjustment every 2 cm). Make sure the adjustable legs are locked.
- The adjustable legs can be extended over 16cm and are not designed to make the device taller, but to adapt it to a difference in level.

Access:


- Once on the floor, set the small chain.

Closing:

- Follow the opposite steps of the opening.

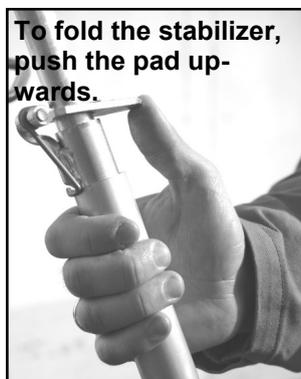

Working positions

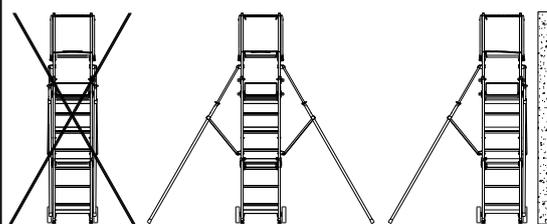

3. Tips for proper use:

- Do not use the platform without its safety rails and behind a door that has not been sealed off.
- The surfaces on which the platform is set must be horizontal and non slippery.
- All the legs must touch the ground, and if it is soft, you must set up a plate beneath the all the supports that require one.
- Make sure the work area is far from any working power line.
- You must handle the platform with care and must not throw it.
- Always go up and down facing the platform, make sure you wear shoes in good conditions delivering a good support.
- Do not go up the platform if you suffer from vertigo or if you are tired.

4. Maintenance:

- Check the platform is in good condition before each use (welding points, component geometry, lock conditions, which have to be replaced, if need be by a DUARIB-made components).
- Before each new worksite, use a clean cloth on the sliding parts of the front and back bases to prevent damage to the guiding system.