


Use : The T Pliant (folding) are platforms used by professional for work at height in safe conditions.


Maximum load on the floor : **150 kg**. Maximum load in the Tool-bag : **15 kg**. Maximum horizontal pressure at floor level : **30 kg**.

Specifications : The T Pliants are compliant with the «Plateformes Individuelles Roulantes Légères» (Lightweight Rolling Individual Platform) (PIRL - NF P 93-353) and with the decree dating from December 1st 2004 (n°2004-924). Two wheels are designed to move the LRIP and they cannot be moved. Two autolock independent and telescopic stabilizers guarantee the stability of the LRIP when used according to the norm.

Opening the LRIP :

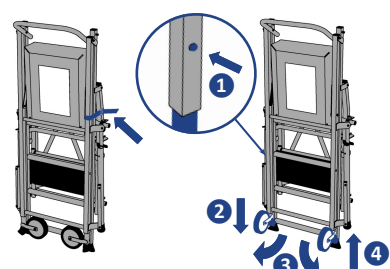


- 1** Unhook the strap.
- 2** Press the button **1**, next to wheels **2**, rotate them outwards **3** then retract them **4**.
- 3** Open the LRIP until the floor is supported by the span.

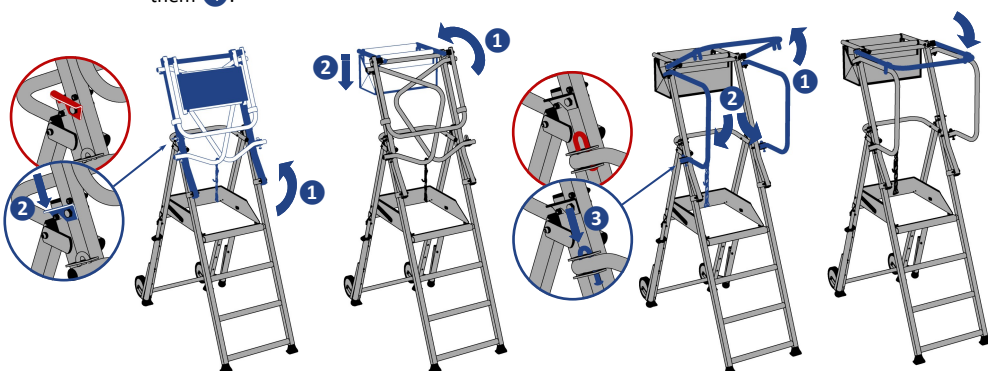

- 4** Rotate the upper part **1** and check the locks are set **2**.
- 5** Rotate the shelf **1**, then unfold the tool bag **2**.
- 6** Rise the handrail **1**, then open the safety rails **2** and lock them **3**.
- 7** Lower the handrail **1** so it touches the safety rails.

Setting the height :

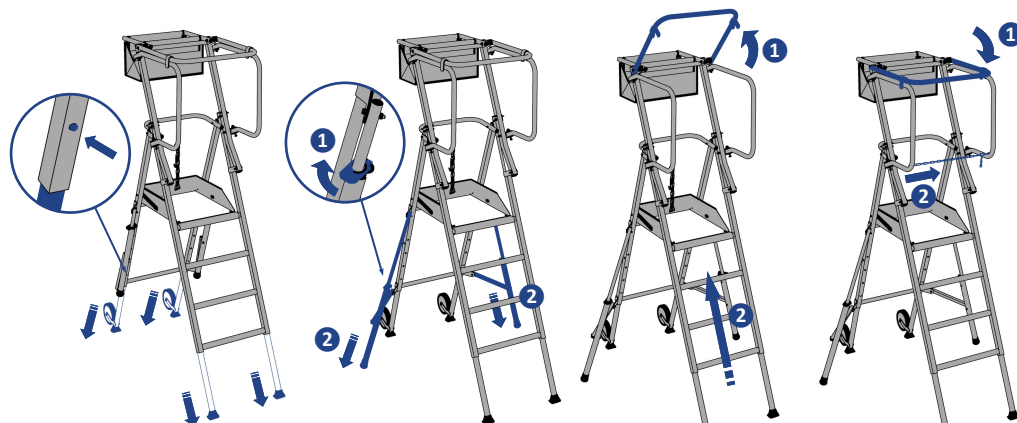

- 8** Press the button, deploy the legs at the desired height, and check the floor is horizontal.
- 9** Lift the pad **1** and deploy the stabilizers until they reach the ground **2**.
- 10** Lift the handrail up **1**, and access the inside of the LRIP **2**.
- 11** Lower the handrail **1** and install the safety rail chain **2**.

Maintenance and servicing :

Before each use, check the general condition of the LRIP. Points to check :

- The state of welded and bolted structures, of the plywood, and the geometry of the components.
- The mobile parts and locks work properly.
- Stickers can be easily read.


Replace defective parts with Duarib-made components.

It is mandatory to periodically checks the hardware according to the current legislation.

TPLIANT 4 5 6 140

	18404	18405	18406	18407
Wheight	18,3 kg	19,1 kg	20,1 kg	22,9 kg
Floor height	0,52m	0,74m	0,84m	1,09m
Hp	0,63m	0,84m	0,95m	1,19m
	0,74m	0,95m	1,05m	1,30m
	0,84m	1,05m	1,15m	1,40m
Length overall	1,03m	1,21m	1,29m	1,49m
Lo	1,12m	1,29m	1,38m	1,58m
	1,21m	1,38m	1,47m	1,66m
	1,29m	1,47m	1,54m	1,75m
Width overall	0,98m	0,94m	1,15m	1,34m
La	1,21m	1,18m	1,42m	1,50m
	1,26m	1,24m	1,53m	1,56m
	1,24m	1,22m	1,56m	1,57m
Folded length*	1,24m	1,47m	1,58m	1,84m
Folded width*	0,65m			
Folded thickness*	0,36m			


Folded position* :

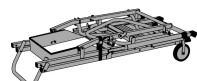

Moving the LRIP :

While folded, grab the LRIP by the low handrail of the safety rail.

In the working position, grab the LRIP, with no hardware on it, by the legs on the access side, with the stabilizers retracted or not, depending on the environment.

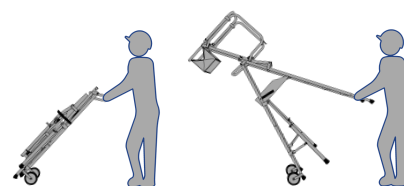

Closing the Individual mobil light platform :

Follow the steps in reverse order of opening, with step 2 being optional.

Safety instructions :

- Set all the safety rails.
- All 4 legs must touch the ground.
- Deploy the stabilizers.
- Wearing PPE is mandatory.
- Do not go up the safety rails.
- Do not jump on the floor.

